




iMac Intel 27" EMC 2546 SSD Replacement

prerequisite for logic board, after AirPort and before PSU cable.

Written By: Andrew Optimus Goldberg

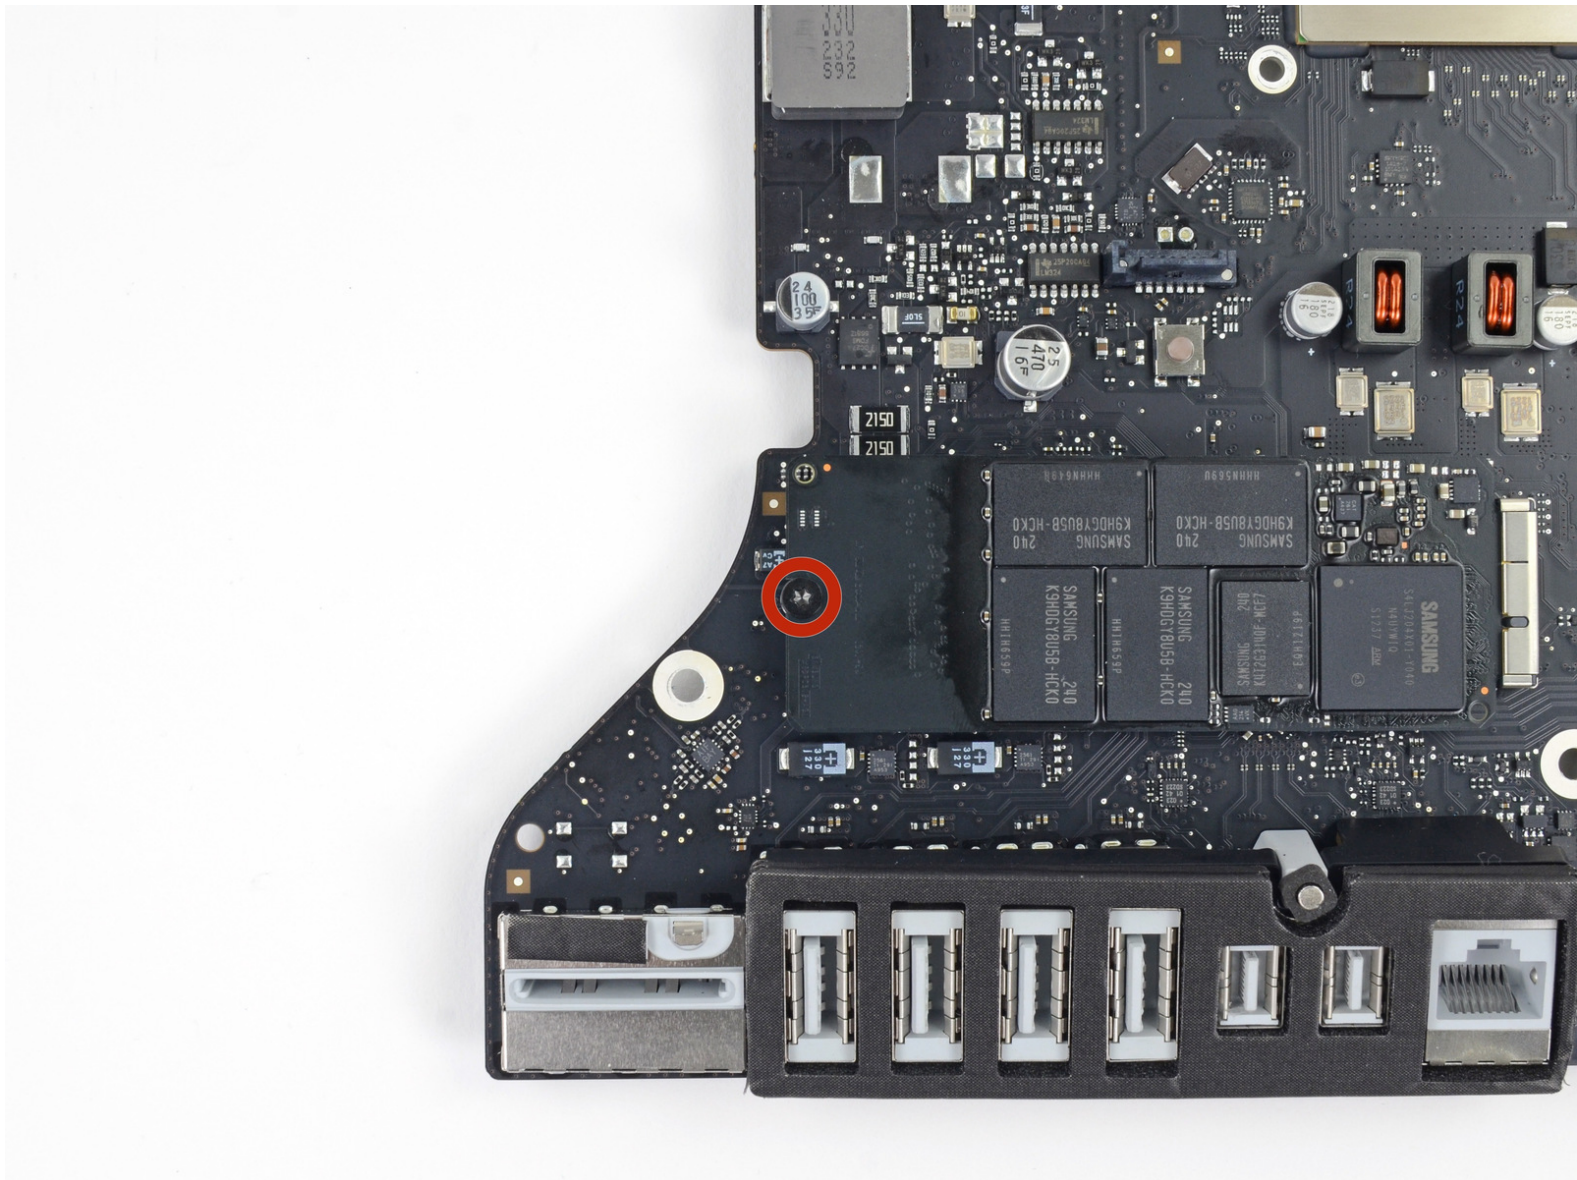




TOOLS:




- [T9 Torx Screwdriver](#) (1)
-

Step 1 — SSD

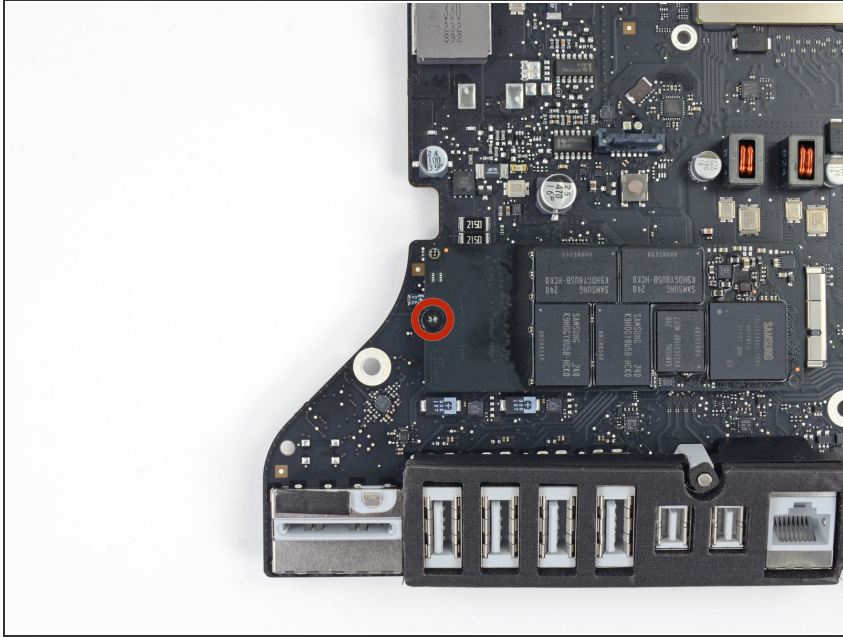

- Remove the single 5.3 mm T9 screw securing the SSD to the logic board.

Step 2

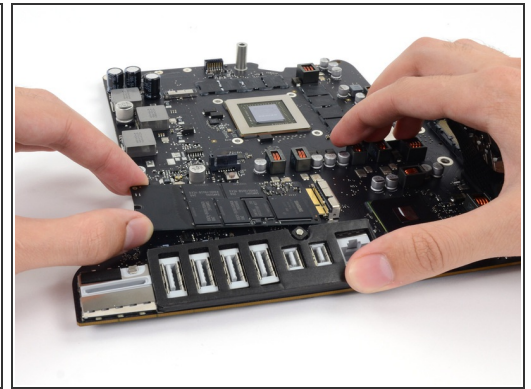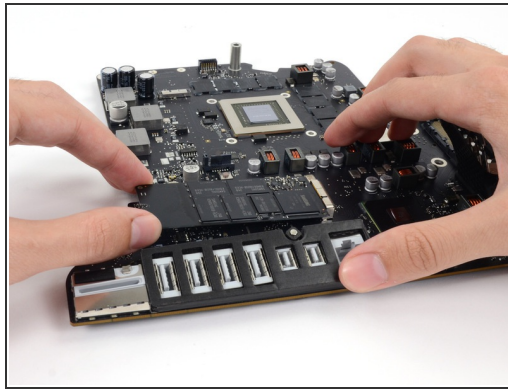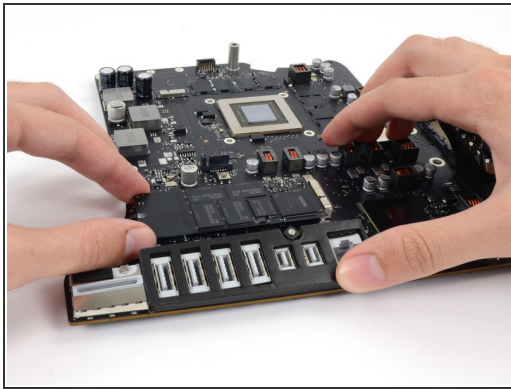

⚠ To avoid damaging its socket, do not lift the end of the SSD excessively.

- Lift the end of the SSD up slightly and pull it straight out of its socket on the logic board.
- ☑ When reinstalling the SSD, be sure it is properly seated before reinstalling its retaining screw.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-22 04:18:03 PM.